







Disarming after an Alarm

If an alarm has occurred, it will be indicated by the keypad. Once the cause of the alarm has been established the system must be reset.

To disarm the system after an alarm:

1. If outside the premises, open an "entry" door. The keypad(s) beeps, indicating that the entry delay period has begun.
2. Observe the keypad. If the  icon is flashing, and the display shows the activated partition, an alarm activation has occurred. Pressing the  key will show the activated partition and zone.
3. Hold the tag close to the keypad's keys OR enter your user code and press . If an alarm occurred:
 - a) The  icon will flash
 - b) The sirens will sound four siren chirps, indicating that an alarm occurred in the system.
 - c) If your system is equipped with the voice module, an announcement message will be broadcast: "Alarm occurred in the system".
4. Scroll through the list of alarm zones. To exit the alarm memory mode before the timeout has expired, press  (which will clear the alarm memory) or  (which will not clear the alarm memory)
5. If required, proceed to "Resetting after an alarm" (see below).

Note:

If an alarm occurred in the system, it is recommended to leave the premises. Only after police investigation should you consider that the burglar is no longer on your premises and you can re-enter. In special cases (if programmed by your installer) arming the system after an alarm might require a technician code. On the LCD, a **Not ready - technician reset** message may appear. For more information, consult with your installer.