

## Disarming your system

Disarming your system causes the detectors not to trigger an alarm when violated.


Disarming deactivates the partitions assigned to the specified user code.

You can disarm your system by code, for which you need to use your user code or a proximity tag.

When you enter the premises, the entry delay count-down period begins. You must disarm the system within the entry delay period to prevent it from triggering an alarm. The disarming operation will be followed by a local message announcement (if defined).

LightSYS disarming varieties include the following:

### Full Disarming

1. If outside the premises, open an "entry" door. The keypad(s) beeps, indicating that the entry delay time period has begun.
2. Before the entry delay time period expires, enter your user code followed by  or present the proximity tag.



#### Note:

1. If you make a mistake entering your user code, the keypad produces three short beeps. If so, simply re-enter the above sequence correctly.
2. If defined by your installer, system sirens sounding two siren chirps indicate that the system is disarmed.







### Partition Disarming

Partition disarming enables you to disarm individual partitions within an armed system.

#### To disarm specific partitions:

1. Enter user code followed by  or present the proximity tag.
2. Select the partition number (1–4) OR- to disarm all partitions at once, select 0.
3. Press  to confirm. A confirmation message will be displayed for several seconds.
4. Repeat the above steps to disarm other partitions.

#### Examples:

1. To disarm partition 3 with code 1234: 1-2-3-4  3 .
- To disarm ALL partitions: 1-2-3-4  0 .
- To disarm partitions 3 and 4 with a tag: 1-2-3-4  3 4 .