

Setting and Changing System Time and Date

The correct time and date must be set to ensure proper operation of LightSYS.

To set/change the system time:

1. Press  and enter grand master code followed by .
2. Using the arrow keys, scroll to the option **Clock** and press .
3. The display will show **Time and Date**. Press .
4. Enter the correct time in 24-hour format and date. For entering the date use the  keys to move the cursor and the  /  key to toggle among the choices.
5. Press  to save your settings.