

To ARM Individual Areas

If the system has been set up for multiple areas, each area can be individually selected for **FULL** or **PART** arming as required.

Ensure that the premises are secure (all windows and doors not being omitted are closed) and the Ready light is on.

Enter a valid User code (?) (?) (?) (?)

```
Do you want to
Arm system?
```

To select areas for full arming, proceed as follows:

Press () / (Area)

```
Select Areas >
> ***..... <
```

Use keys (1) - (8) to select the required area ((0) selects/deselects all Areas)

```
Select Areas >
> AB****.. <
```

Press () / (Yes) or () / (Chime) to FULL arm

The exit tone will sound (if silent arm has not been selected)

```
Areas in Exit >
AB.....
```

Leave the premises

When the areas have armed, the exit tone (if sounding) will stop

The selected areas are now armed.

```
Areas Armed >
AB.....
```

To select areas for part arming, proceed as follows:

Press () / (Part) (1) , (2) or (3) followed by () / (Area)

Then select the area(s) to part arm as for full arm above.