



To FULL Arm the System

The system is **FULL Armed** when ALL zones are ON (not omitted).



NOTE

Your Installer may have programmed the system so that it can be set by just pressing  /  , if this is the case then there is no need to enter the User code below.

To arm the system, proceed as follows:

Ensure that the premises are secure (all doors and windows closed etc.) and the Ready light is on.

Enter a valid User code    

Do you want to
Arm System?

Press  to Silent arm (if required)

Do you want to
Silent Arm?

Press  /  to arm

The exit tone will sound (if silent arm has not been selected)

Areas in Exit >
A.....

Leave the premises

When the system has armed the exit tone will stop (if sounding)

Tue 06 Mar 2001

The system is now armed.