

Changing Ricochet Device Batteries

If enabled the Master User at user 01 may access this option to replace batteries in Ricochet Wireless devices installed on the system. Only Areas with Ricochet Devices assigned to the Master User may be selected. The battery replacement option disables tampers on Ricochet devices for 60 minutes. All tampers will be recorded in the event log. If battery replacement mode is not stopped within the 60 minute time window, the tamper circuits will be re-enabled and cause an alarm condition.

To replace batteries, proceed as follows:

Enter a valid Master User code

Ⓜ Ⓜ Ⓜ Ⓜ

Do you want to
Arm System?

Press  / **Menu**

Do you want
User Menu?

Press  / **Yes**

Do you want to
View Event Lo9?

Press 


Start Battery
Replacement?

Press  / **Yes**

Select Areas >
A.....<.....

Use keys **1** - **8** to select or
deselect an area to start battery
replacement

Select Areas >
A.....<.....

Press  / **Yes** and proceed to change
device batteries

Start Battery
Replacement?

When complete Press 


Stop Battery
Replacement?

Use keys **1** - **8** to select or
deselect an area to stop battery
replacement

Select Areas >
A.....<.....

Press  / **Yes** when complete

Press  / **Menu**, when finished

Press  / **Reset** to exit the menu

The display will return to normal.