

Enabling Engineer Access

If Engineer access (either on-site or via remote download computer) has been programmed as User authorised, this option must be used to allow the Engineer access to the programming menu. Users with access to this option can authorise Engineer access.



Engineer access is only permitted for 4 hours after it is enabled, after which, it will automatically be disabled again.

To enable Engineer access, proceed as follows:

Enter a valid User code (?) (?) (?) (?)

Do you want to
Arm System?

Press (Menu) / (Menu)

Do you want
User Menu?

Press (Yes) / (Yes)

Do you want to
View Event Log?

Press (Up/Down) until the display looks like this:

Do you want to
Enable Engineer?

Press (Yes) / (Yes)

Engineer Access>
Disabled

Press (No) / (No) to enable/disable Engineer access

Engineer Access>
Enabled

Press (Yes) / (Yes)

Press (Reset) / (Reset) to exit the menu

The display will return to normal.