

## Setting the System Date

The alarm system has a real time clock that is used to date and time stamp events that are recorded within the system Log. Users with access to this option will be able to set the Date on your alarm system.

### To set the System Date, proceed as follows:

Enter a valid User code ( ? ) ( ? ) ( ? ) ( ? )

Do you want to  
Arm System?

Press ( Menu ) / ( Menu )

Do you want  
User Menu?

Press ( ✓ ) / ( Yes )

Do you want to  
View Event Log?

Press ( 8 )

Do you want to  
Set System Date?

Press ( ✓ ) / ( Yes )

Enter New Date >  
06/03/01

Enter the new date ( D ) ( D ) ( M ) ( M ) ( Y ) ( Y )

Enter New Date >  
24/05/01

Press ( ✓ ) / ( Yes ) when finished

Press ( Reset ) / ( Reset ) to exit the menu

The display will return to normal.