

# Testing the Sounders and Strobe

Users with access to this option can test various system outputs to ensure that they operate correctly. These include any outputs that have been programmed for specific operations i.e. bringing on floodlights, sounding buzzers etc. The internal sounders, speakers and the external sounder can also be tested to ensure that they are operating correctly.



Any outputs that have been left 'On' will be turned 'Off' when the menu is exited.

## To test the Sounders and Strobe, proceed as follows:

Enter a valid User code ( ? ) ( ? ) ( ? ) ( ? )

Do you want to  
Ann System?

Press ( Menu ) / ( Menu )

Do you want  
User Menu?

Press ( ✓ ) / ( Yes )

Do you want to  
View Event Log?

Press ( 4 )

Do you want to  
Do System tests?

Press ( ✓ ) / ( Yes )

Push YES to test  
Bell is >Off

Press ( 0 ) to select the BELL test

Press ( 1 ) to select the STROBE test

Press ( 2 ) to select the SPEAKER test

Press ( 3 ) to select the USER OUTPUTS test

Press ( 4 ) to select the DISPLAY test

i.e. 2 for Speaker test

Push YES to test  
Speaker >Off

Press ( ✓ ) / ( Yes ) to test the selected output

Press ( Menu ) / ( Menu ), when finished

Press ( Reset ) / ( Reset ) to exit the menu

The display will return to normal.