

To Turn CHIME On and Off

The system can be set up so that activating (opening) certain zones will cause the internal sounders to chime. This would normally be used on a front door, exit button etc.



NOTE Zones will only cause the internal sounders to chime if they are selected for chime (see page 37 for details on selecting which zones chime).

Once a zone has been selected for chime, the Chime facility can be manually turned on and off as required.



NOTE The system can also be programmed to automatically turn Chime on and off under certain conditions i.e. certain times of the day, door left open etc.

If no zones have been programmed for chime, then turning Chime on and off will have no effect.

To turn CHIME On proceed as follows:

Press  / 

The Chime tone will sound.

To turn CHIME Off proceed as follows:

Press  / 

The Fault tone will sound.