

Walk Testing the System

Users with access to this option can walk test any of the zones on the system to ensure that they operate correctly. A walk test can only be performed when the system or area is disarmed. 24 Hour zones (except Fire and Tamper) are disabled during walk test allowing Audible PA buttons, Silent PA buttons, etc. to be tested.

To perform a walk test, proceed as follows:

Enter a valid User code (?) (?) (?) (?)

```
Do you want to
Arm System?
```

Press (Menu) / (Menu)

```
Do you want
User Menu?
```

Press (✓) / (Yes)

```
Do you want to
View Event Log?
```

Press (5)

```
Do you want to
Do Walk test?
```

Press (✓) / (Yes)

```
Walk test areas>
> *****.. <
```

Use keys (1) - (8) to select an area for walk testing

```
Walk test areas>
> A*****.. <
```

Press (✓) / (Yes) to start the walk test

```
* NONE *
```

Every time zones are activated the keypad will chime

```
Zone 10>Active
Loun9e Detector >
```

Press (Menu) / (Menu), when finished

Press (Reset) / (Reset) to exit the menu

The display will return to normal.