

To VIEW the Status of Zones

Users with access to this feature will be able to check the status of each zone on the system to see whether it is in 'Fault', 'Secure', 'Tamper', 'Shorted' or 'Inactive'.

To view the status of zones, proceed as follows:

Enter a valid User code (?) (?) (?) (?)

```
Do you want to
Arm System?
```

Press (8)

```
Do you want to
View Zone Status
```

Press (✓) / (Yes)

```
Zone 001 Secure
Front Door >
```

Enter a zone number (?) (?) (?) or use the (⬆) key to search

```
Zone 010 Secure
Lounge Detector >
```

(Pressing (🎵) / (Chime) will make the zone chime every time it is activated (an Arrow will appear to the right of the zone number), to clear the Chime, press (🎵) / (Chime) again)

(Pressing (🏠) / (Area) will display the zone text)

(Every time the selected zone is activated, its status will be displayed and the keypad will chime, if selected)

```
Zone 010>Active
Lounge Detector >
```

```
Zone 010 Secure
Lounge Detector >
```

Press (📄) / (Menu) when finished

Press (⏪) / (Reset) to exit the menu

The display will return to normal.

